Changing Product Cook Times - IntelliGap

1. Press the MANUAL/AUTO key to put the grill into the Manual Mode.

2. Scroll to the menu item that requires a change to the cook time by pressing the LEFT ARROW or RIGHT ARROW keys.



3. Press and hold the TIME key for 3-5 seconds.



4. Use the UP ARROW key to increase the time and the DOWN ARROW key to decrease the time. Each press of the key changes the time by one second.



5. Press the OK key to save the changes.

