



## Programming Instructions – Intelli-Gap Grills – Artisan Chicken - On Iron


**\*Note: You must get from step 1 thru step 4 with in the 10 sec time frame or you will have to re-enter the passcode.**

### **SECTION 1: CHANGE MENU ITEMS**

**Step 1:** Press the  or  key. The LED display will read “ENTER PASSCODE”.

**Step 2:** Enter the Manager’s Passcode by pressing the following keys in the order shown:



**Step 3:** Press the  or  key. The display will read System Setup.

**Step 4:** Press the enter key until Auto Idle top temp is displayed. Enter the upper platen temperature (425). Press the enter key until Auto Idle bottom temp is displayed. Enter the lower plate temperature (365).


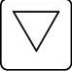




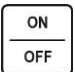

Press the  or  key



# Grill Programming – On Iron

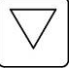

**Step 5:** Press the  or  key to access the Menu Items.



**Step 6:** Press the  or  key until the LED reads **“ADD ITEM”**.





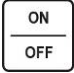



Press the  or  key.



**Step 7:** Press the   or   keys to change the default character. When you have the correct character in the space press the  or  key to move the cursor to the next character. Use the  or  key to make a blank space and to delete any remaining default characters. Repeat until the new menu item finally reads **“ARTGRILL – CLAM”**.


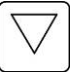


**Step 8:** Press the  or  key until the LED reads **“AM N PM N”**.

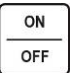

Press the  or  key to change to **“AM N PM Y”**.

Press the  or  key.

**Step 9:** The LED reads **“REMOVE IN: 000”**. Set the remove in time to **“245”** by pressing the   or   keys to change the flashing digit and the  or  key to move to the next digit. When the LED reads **“REMOVE IN: 245”** press the  or  key.

**Step 10:** Press the  or  key until **“REMOVE GAP: 000”** appears.

**Step 11:** Set the remove gap setting to **“625”** by pressing the   or   keys


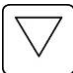


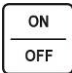

to change the flashing digit and the  or  key to move to the next digit.

## Grill Programming – On Iron



---





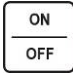

When the LED reads “**REMOVE GAP: 625**” press the  or  key.

**Step 12:** LED reads “**TOP TEMP: OFF**”. Press the  or  key to turn the top temp on.

**Step 13:** Set the top temperature to “**425**” by pressing the   or   keys to change the flashing digit and the  or  key to move to the next digit.

When the LED reads “**TOP TEMP: 425**” press the  or  key.

**Step 14:** LED reads “**BOTTOM TEMP: OFF**”. Press the  or  key to turn the bottom temp on.



**Step 15:** Set the bottom temperature to “**365**” by pressing the   or   keys to change the flashing digit and the  or  key to move to the next digit.

When the LED reads “**BOTTOM TEMP: 365**” press the  or  key.

**Step 16:** Press the  or  key to save the menu item.

### RETURN TO MAIN MENU

**Step 17:** Press the  or  key.


**Step 18:** Press the  or  key.





---


## Programming Instructions – Infinite Gap Grills – Artisan Chicken - On Iron

### Add a New Art Grill Chicken Menu Item


**Step 1:** Press and hold the  key until the software version is displayed.




**Step 2:** Press the  key twice. The display will read “SYSTEM SETUP”.


**Step 3:** Press and hold the  key until the message “GAP CALIBRATION+\_\_\_” appears.



**Step 4:** Press the  key twice. The display will read “MENU ITEMS”.


**Step 5:** From the previous screen, press the  key until “OPT MENU1-CLAM” appears.

**Step 6:** Press the  key to change the active setting to “YES”.

**Step 7:** Press the  key until “REMOVE IN” appears. Set the remove in time to display “REMOVE IN: 245” by pressing the  key to change the flashing number and pressing the  key to move to the next digit.



**Step 8:** Press the  key until “GAP SETTING” appears.

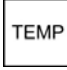
**Step 9:** Change the gap setting to display “GAP SETTING: 625” by pressing the  key to change the flashing number and pressing the  key to move to the next digit.

**Step 10:** Press the  key until “TOP TEMP” appears.




# Grill Programming – On Iron

---


**Step 11:** Change the top temp to display “**TOP TEMP: 425**” by pressing the  key to change the flashing number and pressing the  key to move to the next digit.


**Step 12:** Press the  key until “**BOTTOM TEMP**” appears.

**Step 13:** Change the bottom temp to display “**BOTTOM TEMP: 365**” by pressing the  key to change the flashing number and pressing the  key to move to the next digit.

**Step 14:** Press the  key until “**OPT MENU1-CLAM**” appears (the “O” in OPT will be flashing). Set the item name to “**ARTGRILL**” by pressing the  key to change the letter and pressing the  key to move to the cursor for the next letter. Repeat until the menu item name is changed.

## **RETURN TO MAIN MENU**

**Step 1:** Press the  key.

**Step 2:** Press the  key.