

This step must be performed prior to setting up the new 4:1

Nomenclature

- = Control ON / OFF
- = AM / PM
- = Program
- = Temperature
- = Time
- = Enter

Process Steps - 4:1
 Part A - Turning Off the Old 4:1 Menu Item
 Part B - Removing an Add Item
 Part C - Creating a 4:1 Menu Item

Part A – Turn off the Old 4:1 Menu Item

Note: You must get through steps 1 and 2 within the 10 sec. time frame or you will have to re-enter the passcode.

1. Press the “PROGRAM” key. The LED display will read “ENTER PASSCODE”.



2. Enter the manager’s passcode by pressing the following keys in the order shown:




Press the “ENTER” or “OK” key.

3. Press the “RIGHT ARROW” key until the LED reads “4:1 CLAM”. Press the “ENTER” or “OK” key.



4. Using the “UP” key, select the “AM N PM N” option and press the “ENTER” or “OK” key to accept.

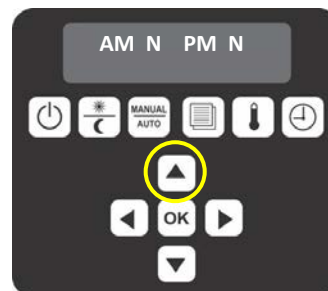

Return to the Main Menu

1. Press the or key twice.

2. Press the or key.

Nomenclature

- = Control ON / OFF
- = AM / PM
- = Program
- = Temperature
- = Time
- = Enter

Process Steps - 4:1

Part A - Turning Off the Old 4:1 Menu Item

Part B - Removing an Add Item

Part C - Creating a 4:1 Menu Item

4. When in the **“REMOVE IN”** screen press the **“TIME”** key for 5 sec. The old menu item is removed and a new ADD ITEM will be added.




Part B - Removing an Add Item

Note: You must get through steps 1 and 2 within the 10 sec. time frame or you will have to re-enter the passcode.

1. Press the **“PROGRAM”** key. The LED display will read **“ENTER PASSCODE”**.




2. Enter the manager's passcode by pressing the following keys in the order shown:

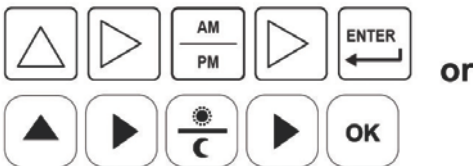

Press the **“ENTER”** or **“OK”** key.

3. Press the **“LEFT ARROW”** key until the LED displays an unused item. (Example: Onions) Press the **“ENTER”** or **“OK”** key.

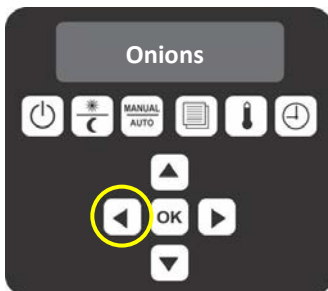

Return to the Main Menu

1. Press the **“PROGRAM”** key twice.
2. Press the **“ENTER”** or **“OK”** key.

Nomenclature

- = Control ON / OFF
- = AM / PM
- = Program
- = Temperature
- = Time
- = Enter

Process Steps - 4:1

Part A - Turning Off the Old 4:1 Menu Item


Part B - Removing an Add Item

Part C - Creating a 4:1 Menu Item

Part C - Creating a NEW 4:1 Menu Item

Note: You must get through steps 1 and 2 within the 10 sec. time frame or you will have to re-enter the passcode.

1. Press the “PROGRAM” key. The LED display will read “ENTER PASSCODE”.

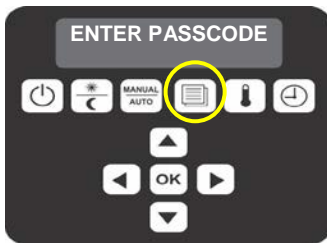

2. Enter the manager's passcode by pressing the following keys in the order shown:




Press the “ENTER” or “OK” key.


3. Press the “LEFT ARROW” key until the LED reads “ADD ITEM”. Press the “ENTER” or “OK” key.




4. Enter the product item name in the top line.

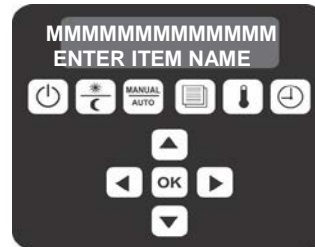


5. Press the “UP” & “DOWN” arrows to change the far left flashing digit to change the number or letter.

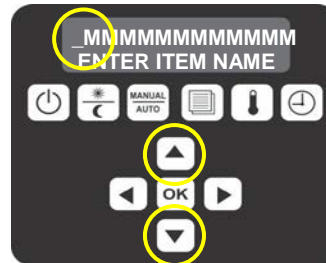

6. Press the “RIGHT ARROW” to move to the next number or letter.

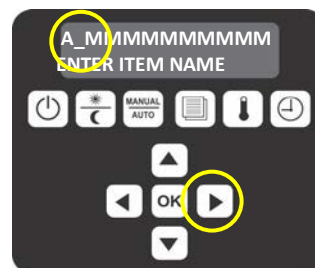

7. Press the “ON-OFF” key to erase a number or letter.

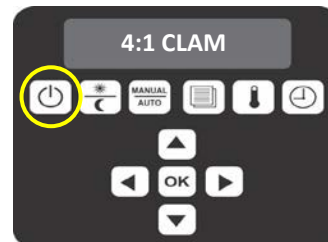

Press the “OK” key to finish naming the product.

8. Using the “UP” key, select the “CLAM” option and press the “ENTER” or “OK” key to accept.




9. Using the “UP” key, select “3”, and press the “ENTER” or “OK” key to accept.



10. Using the “UP” key, select the “AM N PM Y” option and press the “ENTER” or “OK” key to accept.



11. For the “REMOVE IN” option use the “ON/OFF” key to scroll left or right and the “UP ARROW” key to change the number to 120. Press the “ENTER” or “OK” key to accept.

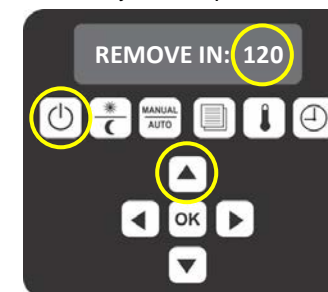

12. Using the “UP ARROW” key, select the “AUTO” option and press the “ENTER” or “OK” key to accept.




13. Using the same keys in Step 11, enter in “500”. Press the “ENTER” or “OK” key to accept.




(Use the “ON/OFF” key to scroll left or right and the “UP ARROW” to change the number)

14. Enter in “010”. Press the “ENTER” or “OK” key to accept.

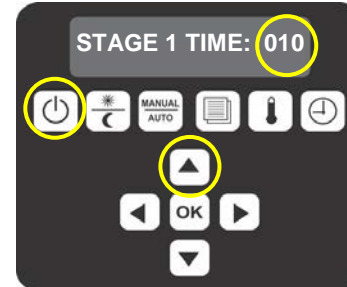


(Use the “ON/OFF” key to scroll left or right and the “UP ARROW” to change the number)

15. Enter in “425”. Press the “ENTER” or “OK” key to accept.

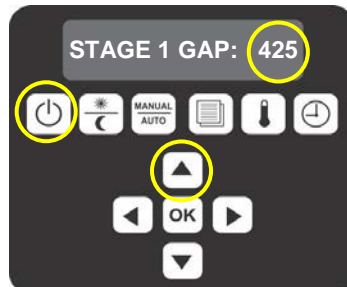

(Use the “ON/OFF” key to scroll left or right and the “UP ARROW” to change the number)


16. Enter in "017".
Press the "ENTER" or "OK" key to accept.

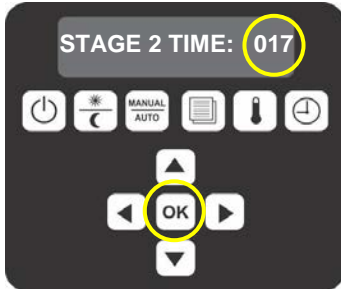


17. Enter in "490".
Press the "ENTER" or "OK" key to accept.




18. Enter in "057".
Press the "ENTER" or "OK" key to accept.

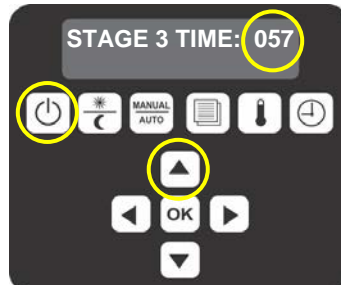

19. Enter in "450".
Press the "ENTER" or "OK" key to accept.

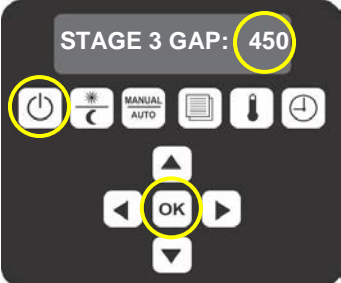

20. Enter in "000".
Press the "ENTER" or "OK" key to accept.

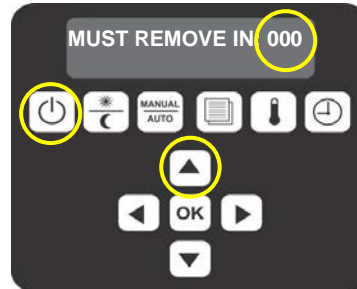


21. Enter in "000".
Press the "ENTER" or "OK" key to accept.



22. Enter in "AUTO".
Press the "ENTER" or "OK" key to accept.




23. Enter in "425".
Press the "ENTER" or "OK" key to accept.

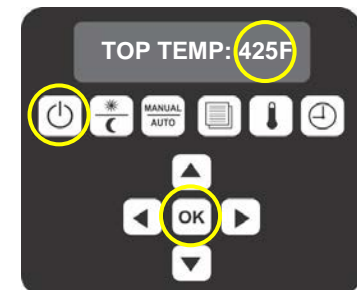


24. Enter in “365”.
Press the “ENTER” or “OK” key to accept.




25. Enter in “YES”.
Press the “ENTER” or “OK” key to accept.

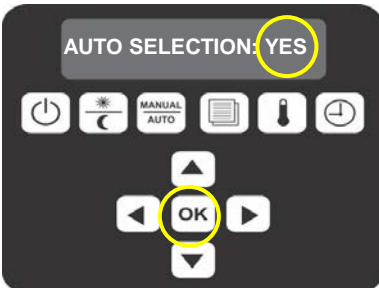

26. Enter in “400 to 530”.
Set in the first group of numbers (ex: 400),
Press the “ENTER” or “OK” key to accept.
Set in the second group of numbers (ex: 530),
Press the “ENTER” or “OK” key to accept.

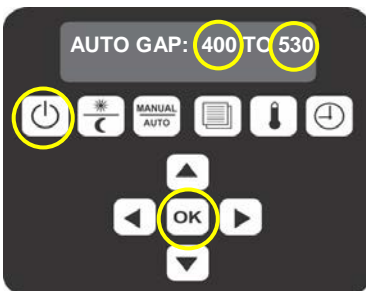

Return to the Main Menu

1. Press the  or  key twice.
2. Press the  or  key.